User manual

E-book（EBK403）

Thank you for your puschasing E-book reader.This manual describes the various functions of this E-book。 So you can operate the E-book freely and fully understand this product. This product bring value to your enjoyment. Please read this user manual carefully before using this e-book. The manual version numder is Ver.

Note:

1. Note that a new battery only in two or three complete charge and discharge cycles before we can achieve optimal performance.
2. New battery in use after the first three full power to extend 3-4 hours. The fouth start can be just filled with power. So that can achieve the best performance.
3. In order to prevent data loss,we recommend the users to backup important data,especially before the firmware update.
4. This product is a high-precision electronic product, please do not disassemble it on their own.
5. Avoid strong beat or collision to the player.
6. Avoid using the player in the following environments:high temperature,low temperature,humidity, dust, strong magnetic fields,and long term exposure to sunlight.
7. Can be used wrung wet cloth gently wipe the shell of the player. It is strictly prohibited to use other chemimcal cleaning solutions.
8. This player shall not be subjected to water droplets and water splashing.Also it should not be placed near the cup filled with liquid items.
9. When you lestenning,please adjust the appropriate volume in order to avoid hearing damage.
10. Please do not change any part of this player
11. Please use the batteries, chargers and accessories which allowed by manufacturer
12. The any other type of product used maybe dangerous and would violate the warranty regulation.
13. Follow the relevant local environmental regulations to deal with the obsolete machinery and accessories.
14. If you have any questions during use the player, please contact your local dealer or directly with the company's customer service center.
15. .Products subject to any changes, without notice,for any inconvenience Caused, please forgive us.

Special Note:
In order to facilitate reading, you can always read ebooks are stored in "Book" folder, The you can open the file rapidly and conveniently.

➢ **Appearance and the Key definition**

(一) Appearance and the Key definition

Key function Description

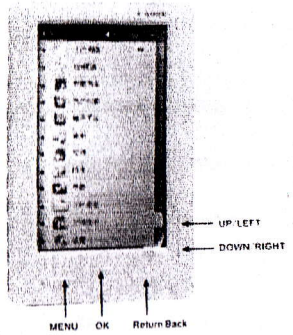

1.: Direction key

" ⮌ " press the button to return to main menu.

◄ ► Page up/down or left/right:

in content interface, short press to select the upper and lower item

➢ **Data transfer, Charging Steps**

(二) Data transfer

First,Connect the player to the computer by USB cable, then choose the files which you need in the computer, copy the files from computer to the player

(三) Charging Steps

1.Using the standard USB cable

Step one: using the USB cable connect the player and computer's back-end USB port(do not use the computer's front USB port, otherwise it will extend the charging time)

Step two: After connected to the computer correctly, the computer screen will appear on-line icons, double-click the bottom right of the computer the "Safely remove hardware" to remove equipment, player do not pull out and continue connect to the computer, this time the player begin to charge.

2.Use the charger for charging

Special Note: the selected charger specifications must meet the following requirements, otherwise, any accident or failure cause will be as man-made damage

Input: AC110V~240V 50/60Hz Max:150mA
Output: DC5.0~5.5V 1000mA(USB) 1500mA(DC)

1.open the E-reader

Puch the power on/off button from "off" to "on" to turning on the player

2.Main interface

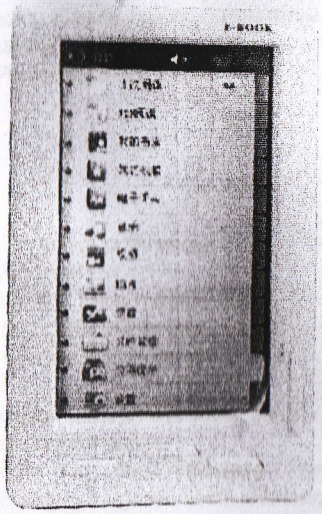

This interface shows all the functions which the model has. If you want to enter the submenu,you can touch the icon which you need.

: Battery indication, display the batter capacity, if it is empty, then please charing in time .

: Time indication.

: Volume Indication

: Home, touch the icon return to main menu.

: Music: touch the Icon enter Music interface

: Video: Touch the Icon enter Video Interface.

: Picture: Touch the Icon enter Phote browse interface

: Record : Touch the Icon enter Record interface

: Games: Touch the Icon enter Application interface. can play 256 bit game In the interface.

: PDF reader: Touch the Icon enter Pdf File read interface.

: Dictionary: Touch the Icon enter dictionary interface.you can find all interpret of word and phrase .

: Setting:: about, OTG connect;Video setting, Time set , Display, Bright time, Sleep off , Auto off, Speaker . Language, Lock time setting, Calibrate Touch screen, Channel Setting, Default Set.

:last read : Touch the Icón enter the files last read.

:Recently Viewed: Touch the Icon enter the browse history, you can view the recently opened document (30 files at most).

: My favorites: Touch the Icon enter the "My favorites" interface,

: My Library: Touch the Icon enter the "My library" intreface, you can find all E-book files except PDF files .

: Library manger: Touch the Icon enter the "Library Manager" interface, you can find all E-book files.

Music playing

In the main menu interface, touch Icon enter Music playing interface.

Video playing

In the main menu interface, touch Icon enter Video content interface. Press "Previous/next" Direction key to choose video and touch video name to start playing, press "up/down" to adjust the volume,touch the to come back to the previous interface 。tocuh Icon to retrun to the main menu,.

1、touch the video icon to get the video list，touch the name of the video it will start playing.

2、In the Video content interface. Touch the "Sort" icon , spring out submenu: Sort by name;sort by time; sort by type.realized videl files rang by Name/time/type .

Picture browsing

In the main menu interface. Touch icon enter picture content interface, press "Page up/page" or "previous/ next" direction key to choose photo , touch photo name to start browse. ,touch the to come back to the previous interface 。tocuh Icon to retrun to the main menu,.

In the picture browse interface, touch " " to realized rotate picture, touch " " icon to realize the curenty pic as background,.touch " / " to realized start /pause picture browse, touch " / " icon to realized change picture .

Record

In the main menu interface. Touch icon enter record interface, touch " " icon to realized quality setting(high quality,mid quality,Low quality) , press " / " icon to realized start/pause record. Touch " " icon to

save recording,touch the to come back to the previous interface 。tocuh Icon to retrun to the main menu

PDF reader （E-book reading 待确认）

In the main menu interface. Touch icon enter e-book content interface, touch photo name to start e-book reading,touch the to come back to the previous interface 。 tocuh Icon to retrun to the main menu

In the e-book reading interface (HTML,HTM,TXT,PDB File format s). Touch "Menu" Icon, spring out submenu: Autoplay, Jump To, Bkmark, Chapter, Ftsize, Fonts, Rotate, color,TTS; touch "Reading" icon to realize "TTS" function . Touch "annotation" Icon , spring out "Annotation""Delecte this""Delete all " submenu, touch submenu to realize "add Annotation"and "Delecte Annotation" function (the function are available for HTML,HTM,TXT,PDB File format only), Touch "Music" Icon , spring out Music player, can start/pause music and change previous/next music directly on the music player, Touch "previous/next" Icon to change content page .

Submenu function Specification

Autoplay: Perline, Perpage, Smooth,

Jumpto: adjust Page NO. and touch "ok/cancel" to realize Jumpt page or cancel Jumpt page function

Bkmark: add bmark ;Del Bmark

Chapter:

Ftsize: FTSize; Linewidth , flow touch  to change Ftsize and Linewidth , touch "OK/cancel" to realize function.

Fonts:

Rotate: Touch the Icon to rotate E-book reading direction

Color: font color; Bkg color setting;Flow touch Color strip (Red,Green,blue) to adjust color, touch "ok/Cancel" to realize change color function,

TTS: Touch the Icon, spring out TTS setting menu : Woman/ man; slow/normal/fast; none/wander/echo; Robert/chorus/udwater; Reverb/eccentric . choose setting option you need, touch "OK/Cancel" to realize function,

In the E-book reading interface(PDF,UMD),Press "M" key , spring out: Back to program; zoom in/out; Rendering size; display setting; Jump To, Esc,

Games

In the main menu interface, Touch the Icon enter Game interface. can play 256 bit game In the interface,

Dictionary

In the main menu interface,Touch the enter dictionary interface.you can find all interpret of word and phrase .

System settings

In the Main menu interface, Touch icon enter setting interface.

1), About: Checking hardware and software information

2) OTG connect :

3) File setting:

4) Video setting:

Continue play: 0n/off ;

Zoom Mode:Normal, fillbox, full screen,fit 110%, Fit 120%, Zoom 100%;

aspect Ratio :Auto Detect; 4:3 ; 12:11 ; 10:11 ;16:9; 16:11; 40:33 ; 2.35:1; 1:1

DHMI Mode: 720p_50HZ, 720p_60HZ;576P;480p

5) Time Set :

6)Display: Background lights; Back to Default Background

7)Bright time : 5s, 10s,15s,20s ,30s, Always on

8) Sleep Off: 10 min, 30 min, 1hour, Switch off

9)Auto off : 10 min, 30 min, 1hour, close

10)Speaker: Off/ON

11)Language: Chinese; english , Multi-language

12) Lock time Setting: 5s, 10s, 30s,60s, 5min; No Locking

13)Galibrate Touch screen

14) Channel setting: Normal; Invert; Left; Right

15)Default Set:

13.Restart the player

If the player encountered an illegal operation and anomalies appear. Such as setting screen,can not operational etc，push the switch key to off side. And restart again .

(四)、Troubleshooting

① Reader can not be properly turned on

Check the battery is without electricity

Connect the charger and recheck it

If it can not be open after charged again, please contact with our customer service

② earphone can not hear the voice

check the volume is set to "0"

check the earphone connection there is no problem

③ Serious Noise

Please check whether the earphone plug clean, dirt can lead to noise

·Check the music file is damaged,try playing other music.If the file has been damaged, Could lead to serious noise.

(五)、Function

No.	Function list	
	Name	Content
1	Music	MP3 、WMA、FLAC、WMV and AAC.
2	E-book formats	TXT、PDF、PDB、FB2、EPUB、HTM、HTML
3	Video	MPEG-4、WMV、RM、RMVB、3GP、FLV、MP4、DAT、VOB、MPG、MPEG、MKV、MOV video format play ,full screen play display
4	Picture browsing	Support JPG,BMP
5	TF card	Support up to 8GB
6	System information	CC1800 600MHZ
7	Record function	Support Voice record
8	TTS	Txt to Speech(optional) Chinese&english only